




Platon® Washers

Installation Instructions

Position Platon washers on the tab,
6 - 8 inches apart.

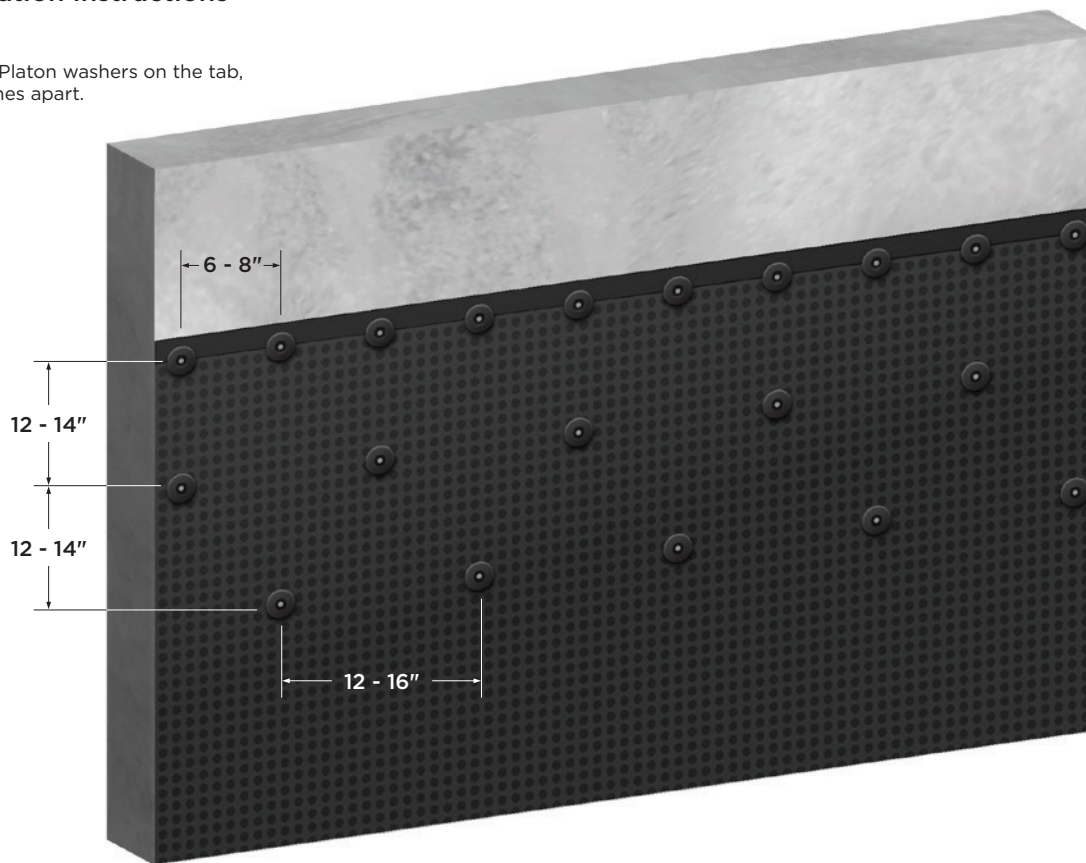

- Position Platon washers in the flat tab 150mm to 200mm (6" to 8") apart and secure in place with 1¼ in concrete nails.
- The first row of washers should be positioned 300mm to 350mm (12" to 14") below the second row of washers located in the tab.
- The second row of washers is to be positioned 300 to 350mm (12" to 14") below the second row however this row should be offset from the first row by approximately half the distance between washers 300mm to 400mm (12" to 16") to create a 'W' pattern.
- Final washer spacing is left to the discretion of the Platon installer and may vary slightly according to site conditions.
- Washer colour may vary.



Armtec is a leading national manufacturer of a comprehensive range of infrastructure products and engineered construction solutions for customers in a diverse cross-section of industries. With operations coast to coast, we are a trusted partner for transportation, public works, forestry, oil and gas, and mining operations throughout the country and abroad. Since 1908 our commitment to quality, customer service and innovation has set the benchmark in the Canadian drainage and bridge landscape.

Call **1-800-565-1152** or visit **armtec.com**